

# 10058.PDFACL




Checklist / Manual de Montagem - Protecção de diferencial Dianteiro; Aço Carbono; T.38



Checklist / Fitting Instructions - Underbody Skid Tube; Fwd Diff.; Carbon steel tube



Despiezas / Instrucciones de montaje -

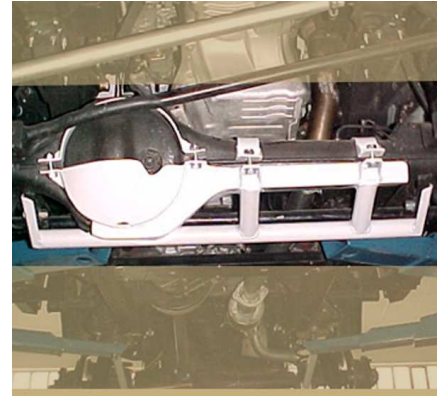

1h



x 1

**1** x1

47000925



**2** x2

46002980



**3** x1

46002979



**4** x6

45000220



Prf. Cb. Sx. M10x40




17-19



17-19

**5** x2

45000067



Prf. Cb. Sx. M12X35

**6** x2


45000066



Fêmea Freiada M12

**7** x4


45000042



Anilha M12

**8** x12

45000039



Anilha M10

**9** x6


45000017



Fêmea Freiada M10

Land Rover Defender 90 TD5 (99-07)

Land Rover Defender 90 TD4 (07-)

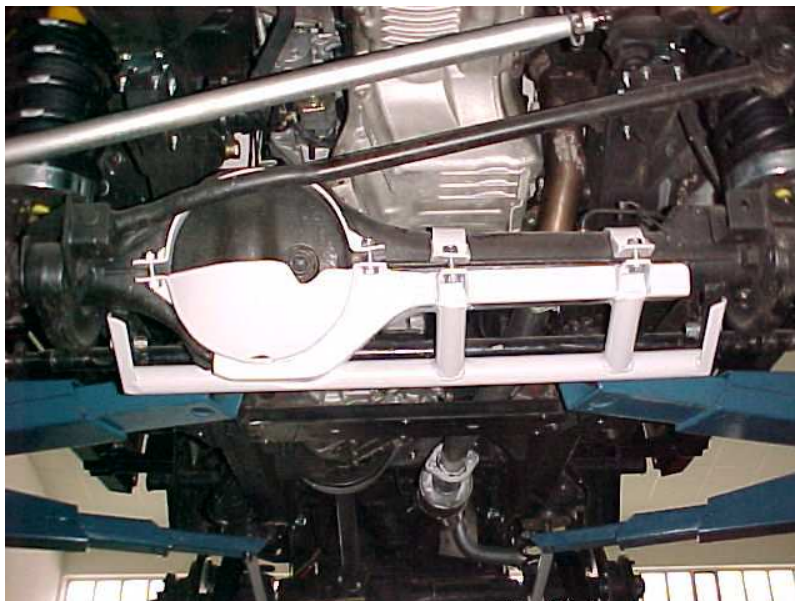

Acessórios: \_\_\_ / \_\_\_ / \_\_\_

Peças/Compostos: \_\_\_ / \_\_\_ / \_\_\_

Artigo: \_\_\_ / \_\_\_ / \_\_\_

Embalagem: \_\_\_ / \_\_\_ / \_\_\_

