

# 8101

**AFN**  
acessórios 4x4




Manual de montagem - Protecção de barras e carter - Alumínio - Mitsubishi Pajero V60 2007



Fitting Instructions - Carter and steering bars protection - Aluminium - Mitsubishi Pajero V60 2007



Instrucciones de montaje - Protección de barras de dirección y carter - Aluminio - Mitsubishi Montero V60 07

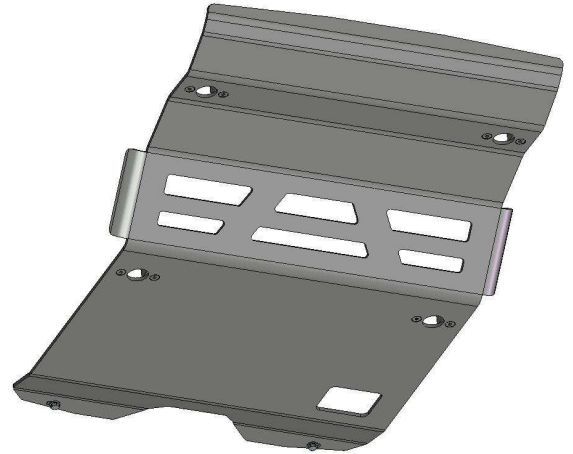

30m

x 2

**1** x 1  
46000304




**2** x 4  
46000305




**3** x 8  
45000009



**4** x 14  
45000048



**5** x 6  
45000014



**6** x 8  
45000013




5



13





13

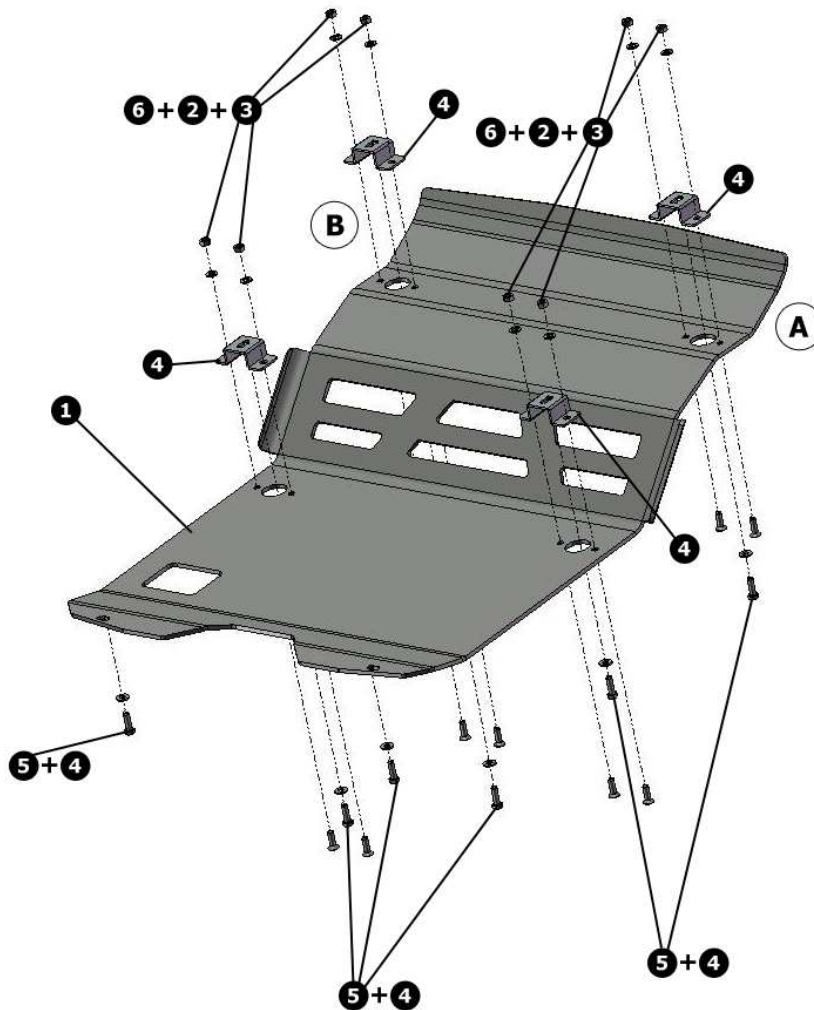

Mitsubishi Pajero V60 5P (07)



Mitsubishi Pajero V60 3P (07)



# 1

