

48001309



Checklist / Manual de Montagem - Suporte de pneu p/ P.choques traseiros



Checklist / Fitting Instructions - Wheel carrier bracket for AFN Bumper



Despiezas / Instrucciones de montaje -




- | | | | | |
|--------------------------|--------------------------|---------------------------|--------------------------|-----------------------------------------------|
| 1 x1
47000801 | 2 x1
47000800 | 3 x1
46005354 | 4 x1
46005353 | <input type="checkbox"/> |
| 5 x1
46005352 | 6 x1
46005351 | 7 x1
46002408 | 8 x1
45000258 | <input type="checkbox"/> Fêmea Sext. M10-Inox |
| 9 x1
45000257 | 10 x6
45000069 | 11 x12
45000039 | 12 x6
45000017 | <input type="checkbox"/> Fêmea Frejada M10 |
| 13 x1
46005577 | 14 x1
46005576 | | | |



17



17

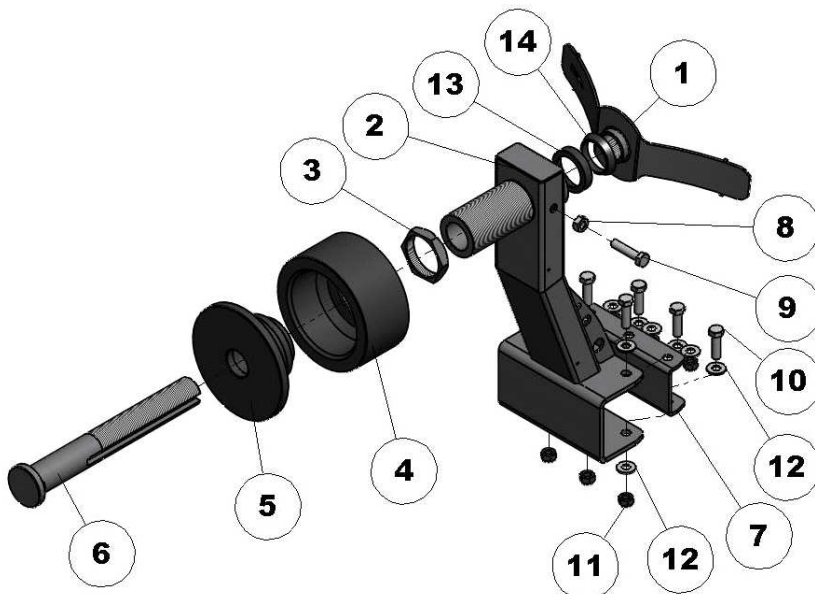

Mitsubishi L-200 Did Triton Cab. Dupla - 4M (06-09)



Mitsubishi L-200 K-64 4x2 / K-74 4x4 MMC - 3M (01-06)



Mitsubishi L-200 Gls K-64 4x2 / K-74 4x4 - 2M (96-00)



Toyota Hilux 4x4 KUN25/KUN26 Cab. Dupla (12/05-2010)



Ford Ranger cab. dupla (07-08)



Mazda BT-50 Cab. Dupla (10/06)



Toyota Land Cruiser KZJ70L/VX3000 (05/93-04/96)



Toyota Hilux 4x4 KUN25/KUN26 Cab Extra (12/05-2010)



Toyota Hilux 4x4 KUN25/KUN26 Cab Extra (12/05-2010)



Mitsubishi L-200 Did Triton Cab. Dupla - Mod. 2010 (10-)




Mitsubishi L-200 Did Triton Club Cab - Mod. 2010 (10-)



Toyota Hilux Cab. Dupla 2011 (2011-)



1

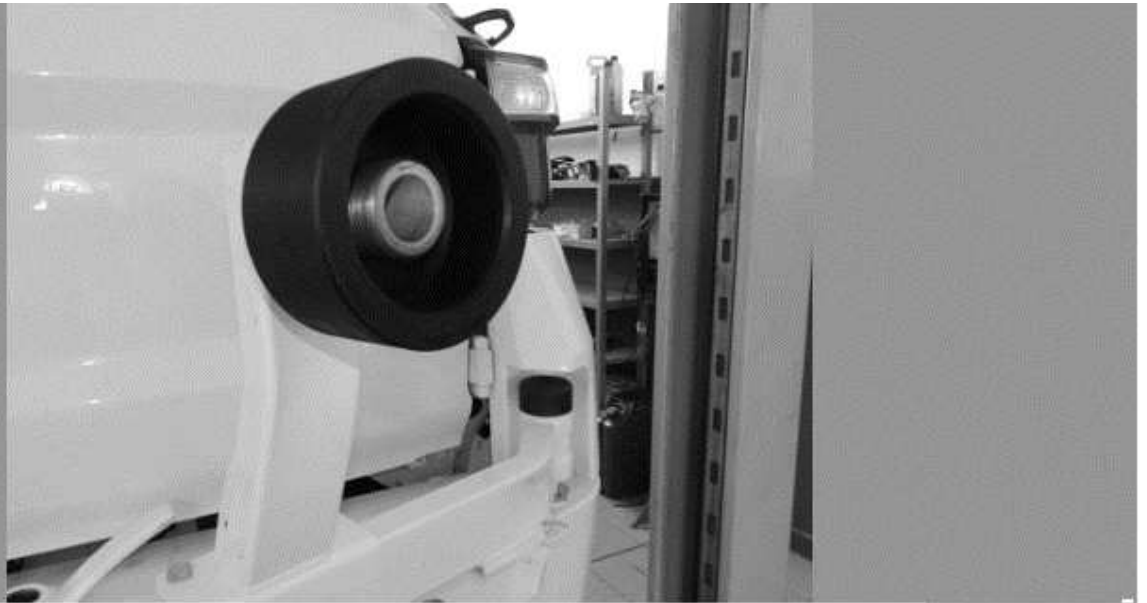


2



3



4

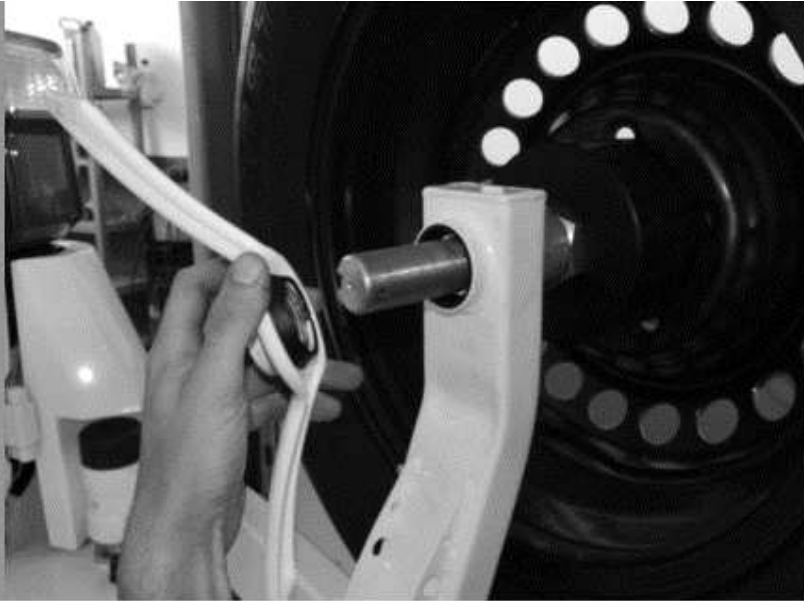

5



6

