

9320



Checklist / Manual de Montagem - PROT.
INFERIOR RADIADOR.ALUMINIO



Checklist / Fitting Instructions - Radiator
guard; Aluminium



Despiezas / Instrucciones de montaje -



1h



x 1

1 x1

47001514



2 x1

46002611



3 x4

45000247



4 x4

45000048



12/13/17



4

5 x4

45000018



6 x1

45000014



7 x3

45000011



8 x4

45000010



Fêmea Freitada M8

Prf. Cb. Sx. M8x25

Anilha aba larga M8

Anilha Aba Larga M10

9 x4

45000009



10 x2

45000008




Prf. Cb. Con. M8x25

Prf. Cb. Sx. M8x30

Toyota Land Cruiser
200 (08-2011)

Toyota Land cruiser
200 - Standard (2012-
)

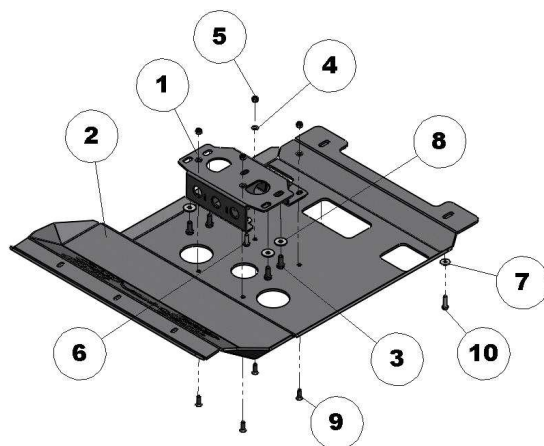


Acessórios: ___ / ___ / ___

Peças/Compostos: ___ / ___ / ___


Artigo: ___ / ___ / ___

Embalagem: ___ / ___ / ___

1

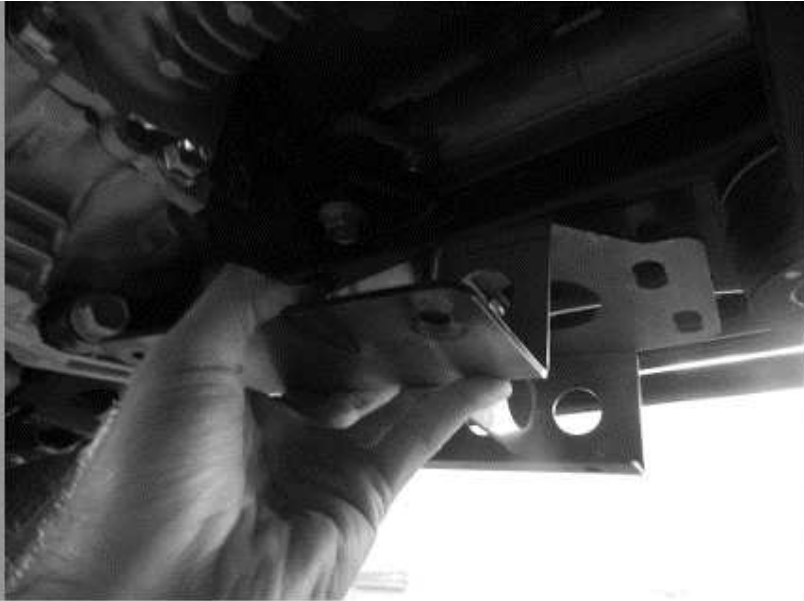

2

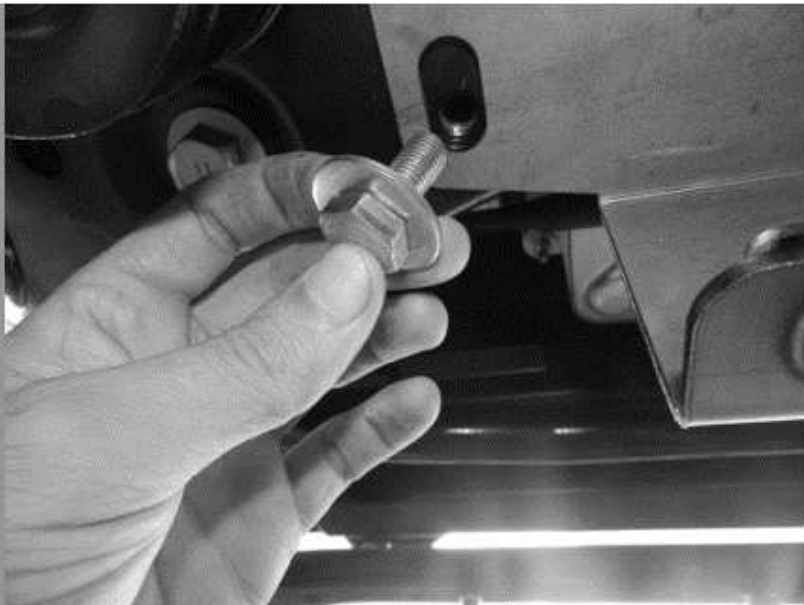

3



4



5



6




7



8



9

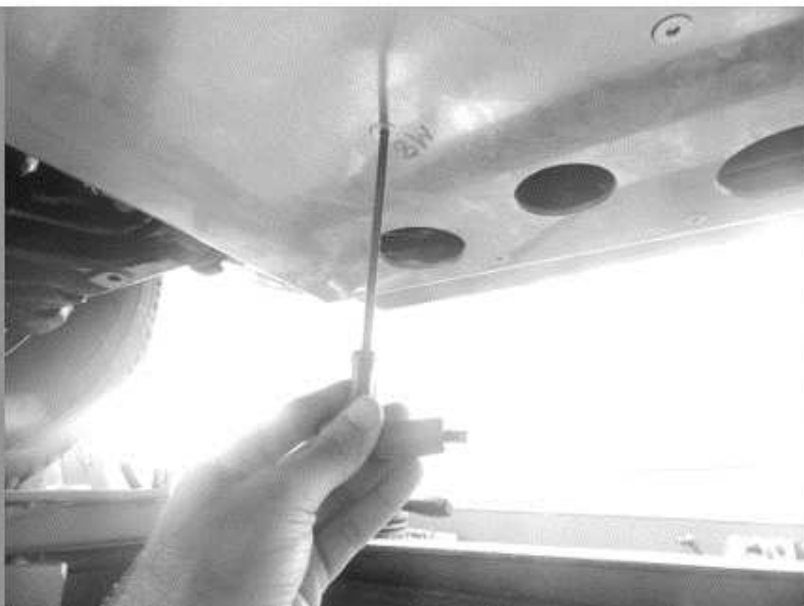

10



11



12